


ICE Loan Resource Decontamination Process



1.

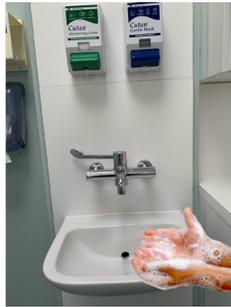

Wash hands in hand wash sink.

Put on PPE.

2.



Unpack contents of parcels.

Disassemble equipment where possible.

3.



Place AAC in 'dirty' sink.

Recycle packaging where possible.

4.



Clean items with neutral detergent and hot water (42-43°C) using disposable cloths.

Rinse well and dry thoroughly with disposable towels.

Put all waste into orange, infectious waste bin.

5.



Disinfect item with disinfectant wipe. 1 wipe per item.

With a clean cloth wipe with neutral detergent and hot water to remove residual disinfectant.

Put all waste into orange, infectious waste bin.

Move item to 'clean side'.


6.



Take off PPE and put in orange, infectious waste bin.

Wash hands in hand wash sink.

7.

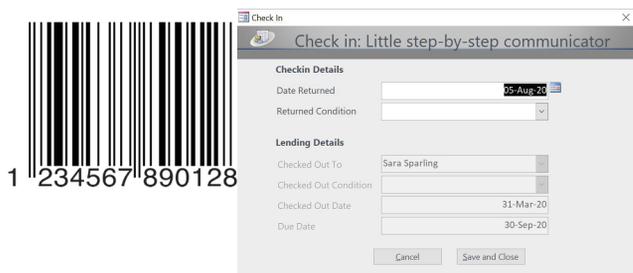

Record barcode for each item.

Add return, cleaning and disinfection details to database.

8.



Return all dry 'clean' items to stock area.